

Solar Fan

Operating instructions

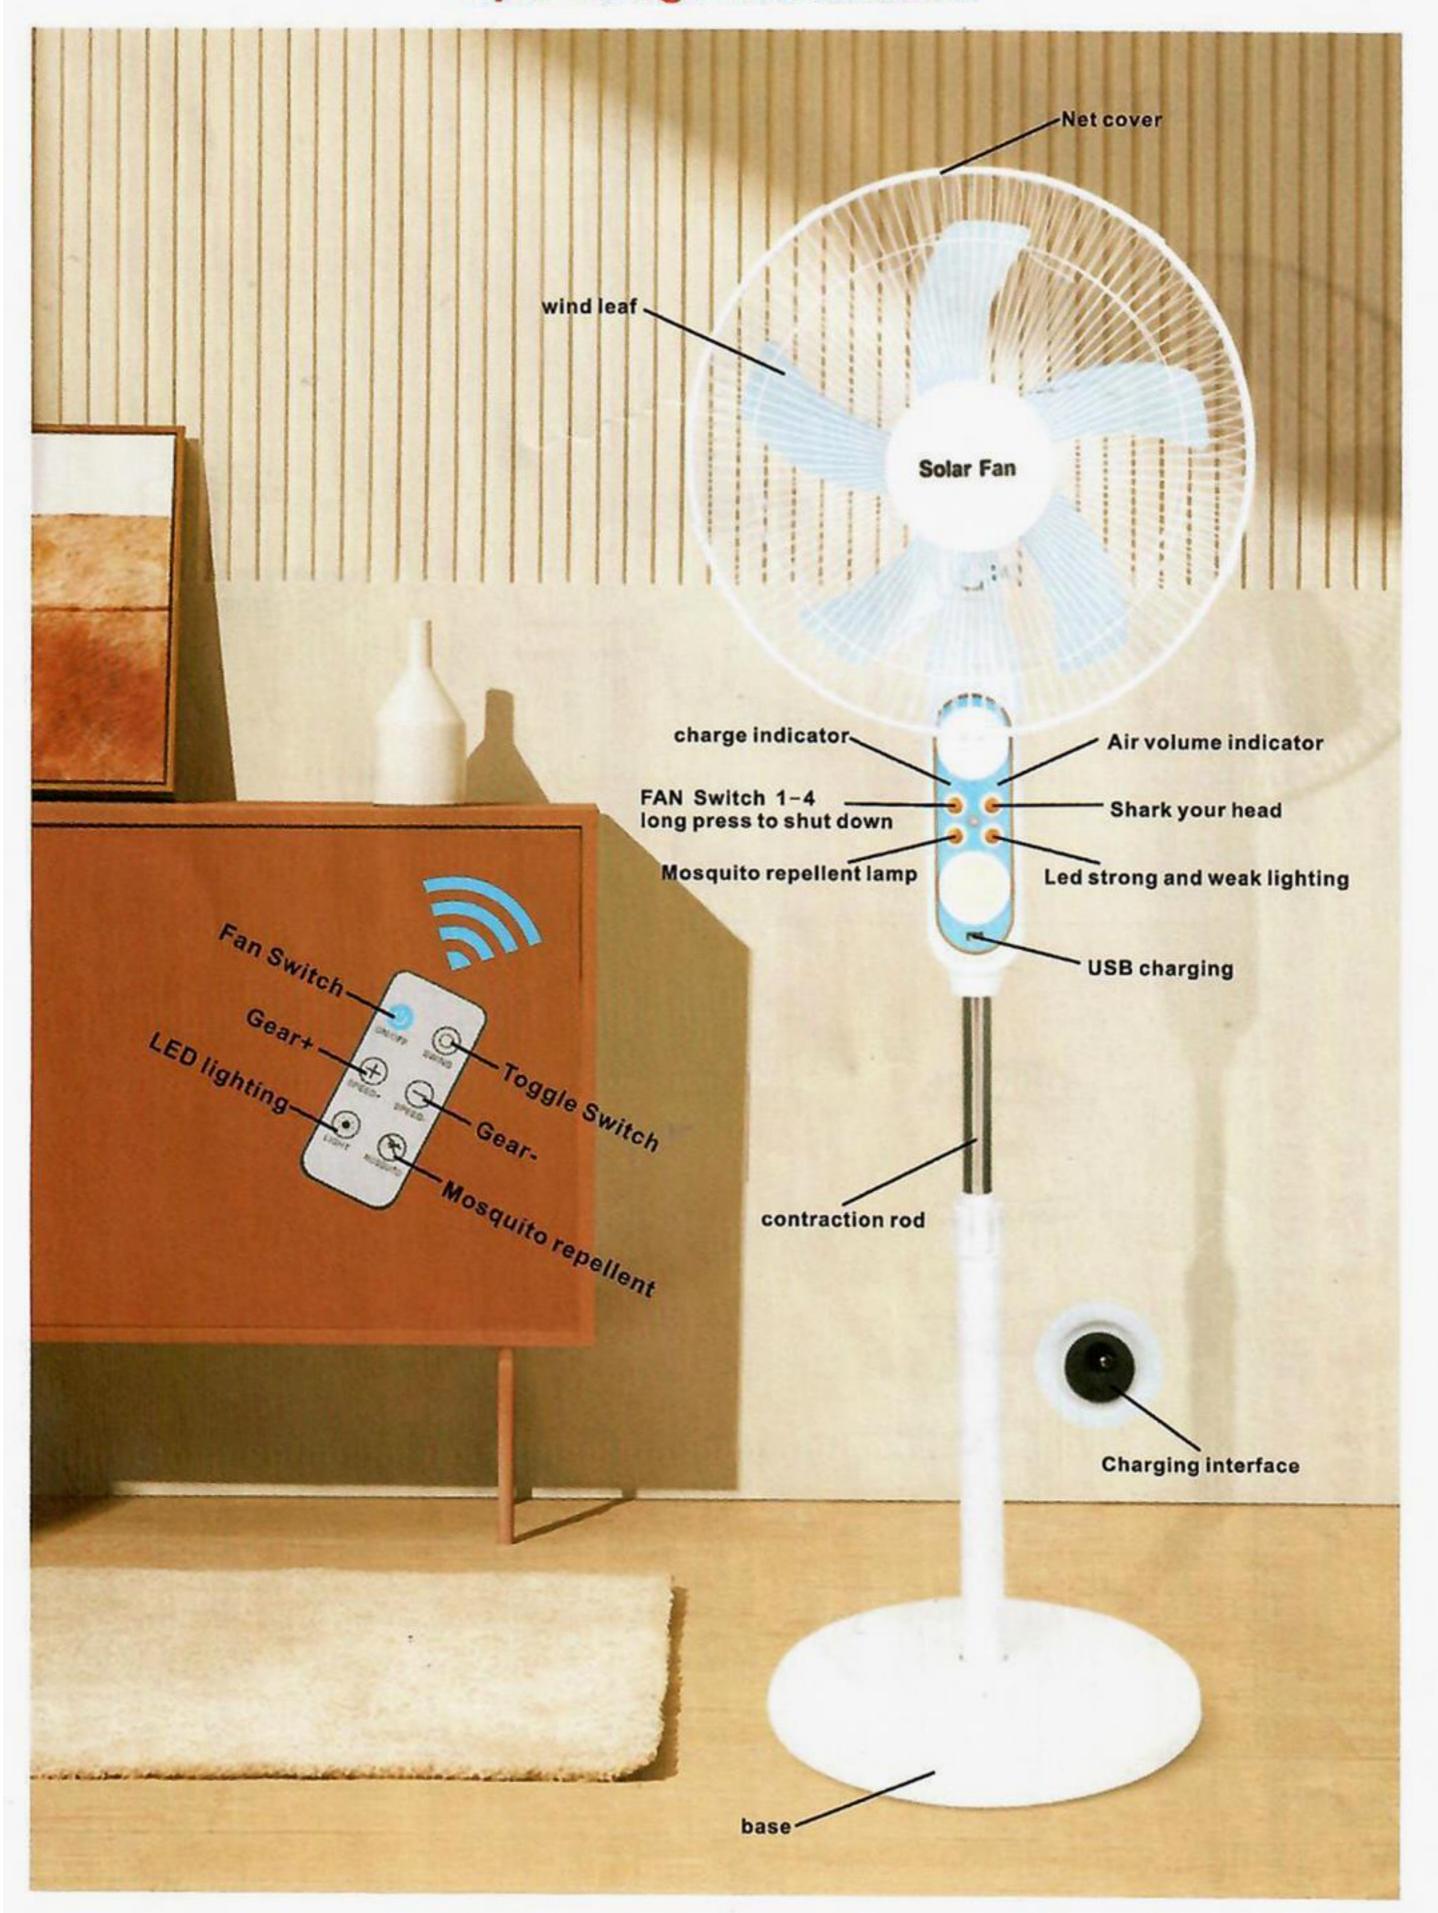

ASSEMBLING INSTRUCTIONS

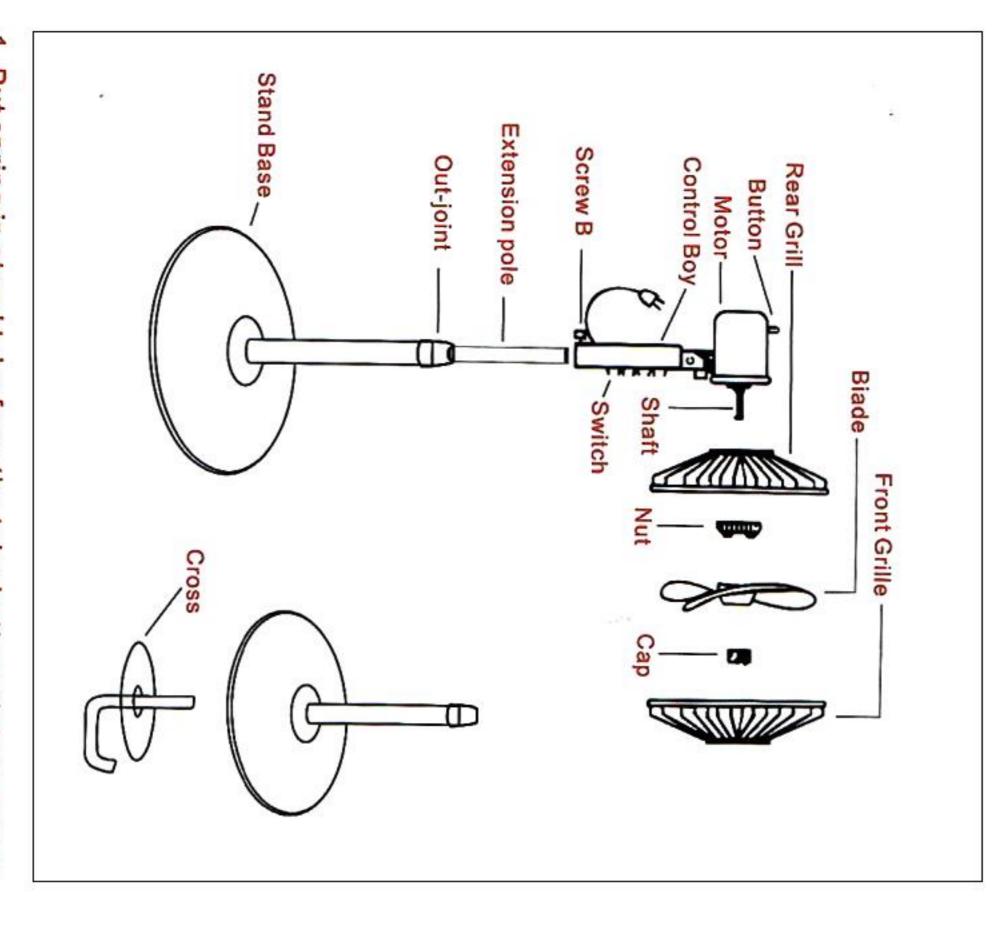


- Put spring in stand tube from the tube bottom, tighten stand tube to stand base, with sorew A.
- Unscrew out-joint.but the base cover and stand cover on the stand base, pull the extension pole out then tighten the out-joint again.
- Place control box firmly on top of extension pole, tighten screw B

Unscrew the blade cap by tuming clockwise & rear guard mounting nut by tuming counter clockwise.


clockwise.

shaft by turning counter


Screw blade cap on

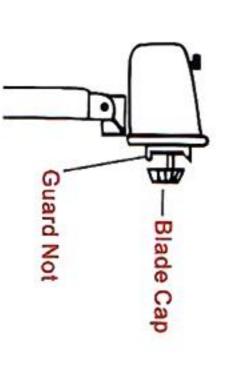

Put rear gnlle on motor shaft and secure with guard nut.

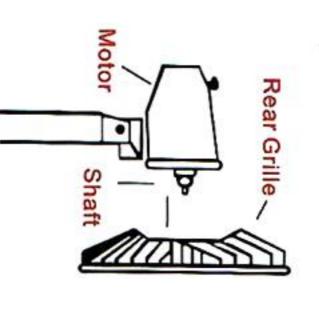


Slide blade on motor shaft.

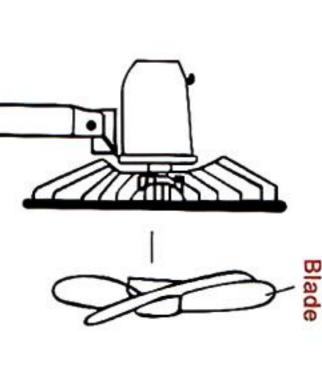

Put front guille on rear grille and close clips or screw grille ring to secure grilles together.

Blade Cap

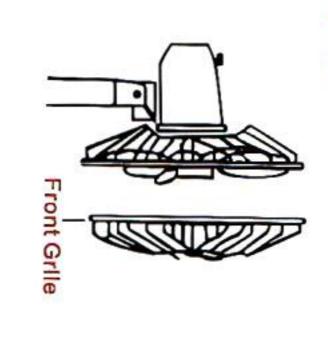

MAINTENANCE

- Before cleaning unplug fan first.
- Clean the fan with soft cloth and neutral detergent, but not gasoline or other solutions.
- Add a few drops of high quality lubnicating oil to the bearings of the motor before the first operation every year.